


Insight Tower (include Insight SE) Android platform user guide


1. Download Insight Tower from our website, download link as below:
<http://www.argusfpv.com/files/towerinsight.apk>
2. At first, connect the Insight SSID (format: IN-XXXXXX) by your device



3. Open the Insight Tower main interface after your installed, please note the following interface area descriptions. The video will playing automatically, click the button with wireless icon at the bottom of the screen to connect the TTL data, if you connect your flight control with our sky unit. Then the flight data will display on the software.

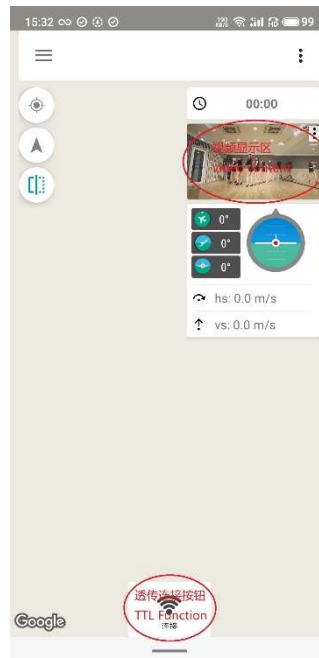

4. Click the video area to half screen display mode.

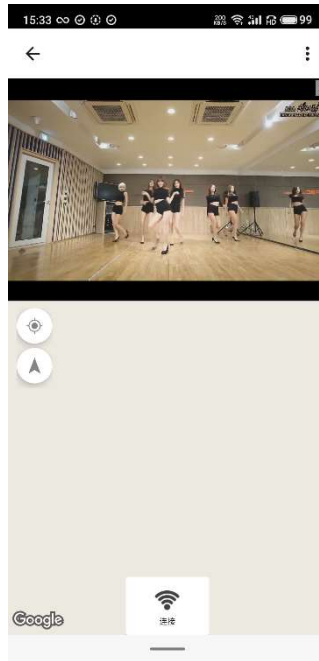

5. Click the video content area to full screen. Blue button on the life side will display different sharp or text base on different smartphone system.



6. Click the blue button will display the PWM interface, and you can control the gimbal device by touch those button.

