

Insight (包含 Insight SE) 快速入门

Insight (include Insight SE) Quick manual


1. 先将地面端充满电

At first, ground unit must has fully charge.



2. 为地面端安装天线

Install antenna for the ground unit.

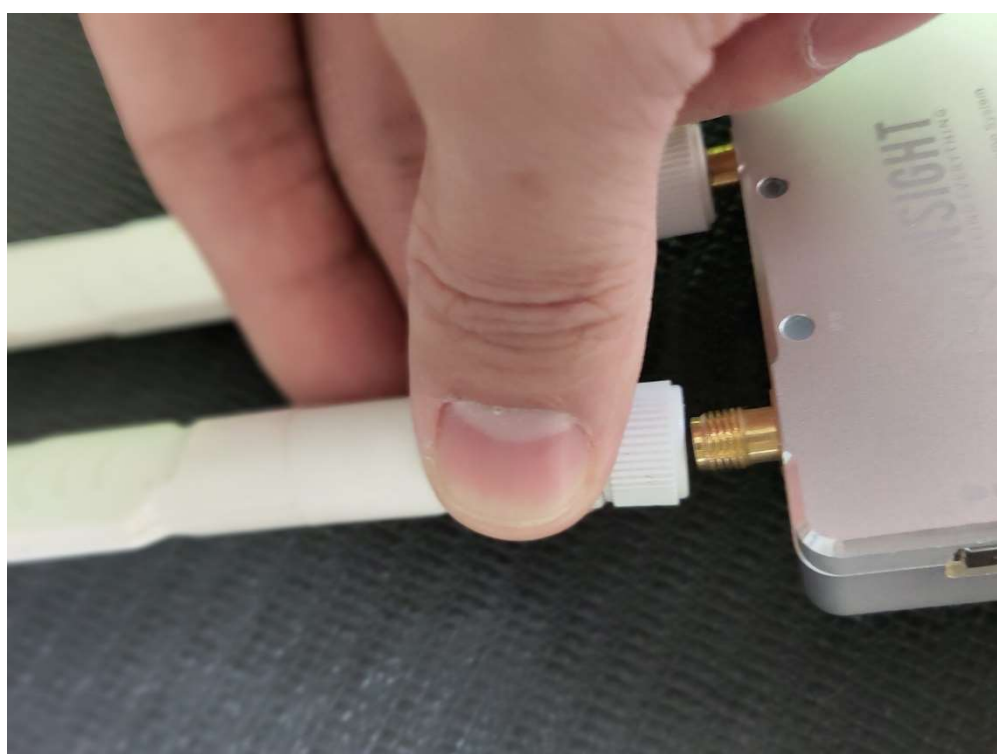


3. 为天空端安装天线

Install antenna for the Air unit.



4. 为天空端安装电压转换器插头（电压转换器支持 5-18V 直流输入，此接口切勿外接电源）

Plug in the power converter (The converter support 5-18V. **Do not connect the power supply directly.**)

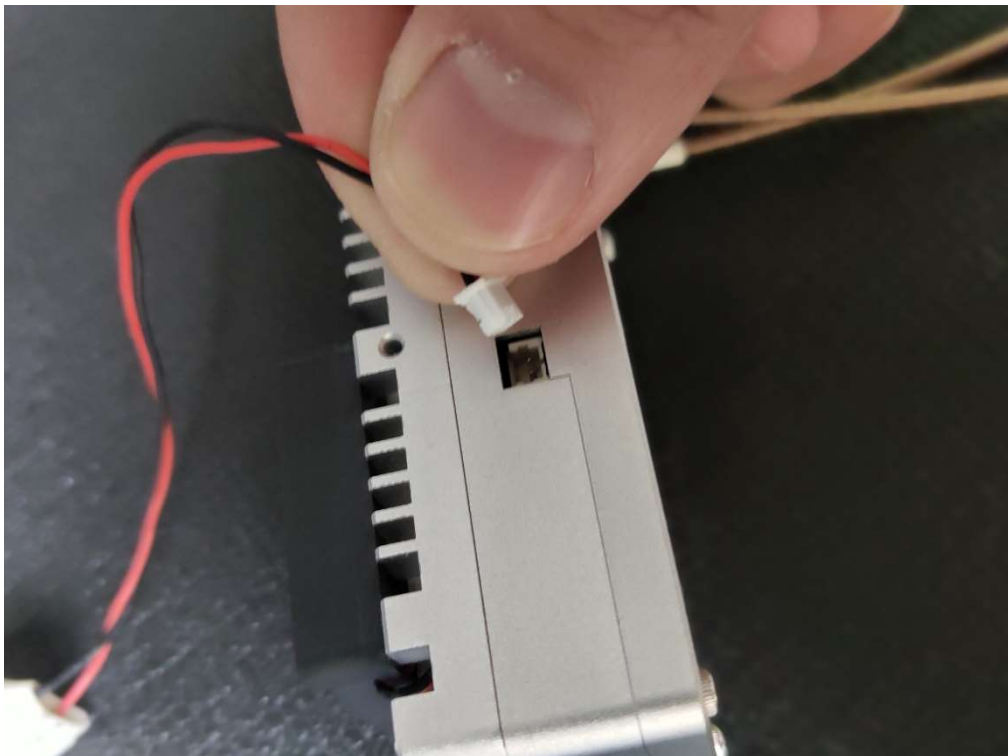

5. 连接好相机，所有设备通电工作。

